 


LED DANCING FLOOR

RG-527A

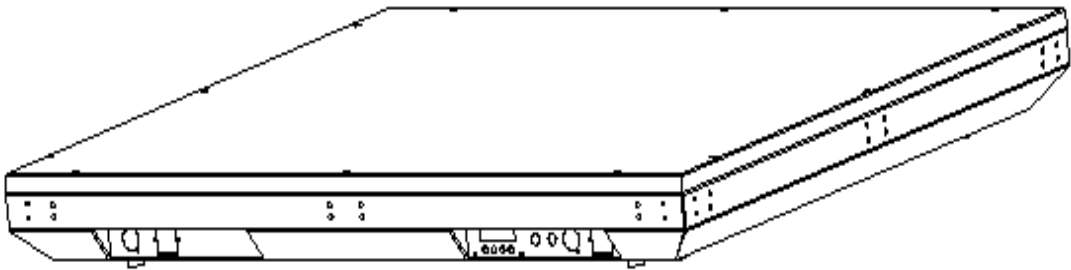

USER MANUAL

Contents

1、	Checking upon receipt	Page1
2、	Safety instruction	Page1
3、	Function description & setting	Page2
4、	Menu setting	Page2-4
5、	Channels	Page 5-7
6、	Installation & connecting	Page 7

1, Checking upon receipt

Thanks for using Our Company' s Products, please read the User Manual carefully and keep for the future refer.

Upon receiving products, please carefully check that there has been no damage caused in transportation and that the following parts are enclosed:

- | | |
|----------------------|------|
| • User Manual | 1Pcs |
| • Power Cable | 1Pcs |
| • Screw | 4Pcs |
| • Connecting Fitting | 1Pcs |

2, Safety Instruction

This product must be installed by a qualified professional

- Keep dry
- All operation and maintenance must be carried out in accordance with this user manual
- Always disconnect the power before attempting to open the equipment housing or carrying out any maintenance.
- Avoid looking directly into the light source (especially those who suffer from epileptic fits)
- DO NOT connect power cable of other electric products with this unit.
- DO NOT connect DMX512 Signal cable of other electric products with this unit.
- Make sure power socket is connected with earth cable well when connect to AC 110V power. The earth cable of this unit is Yellow/Green one
- DO NOT connect this item to the dimmer pack equipment

3, Function description & setting

Voltage: AC90V-110V 50/60HZ AC220V-240V 50/60HZ
Power: 120W
Lamps : \varnothing 5 1152 LEDS (R: 384Pcs, G: 384Pcs, B: 384Pcs)
Control: DMX 512 (31CH);
Sound active,
Built-in/Auto Program;
Master/Slave,
Special Controller

4, Menu setting

SET MENU←SET← | D.001-D.512 | →ENT→DMX SETTING MENU

SET MENU←SET← | FF01-FF99 | →ENT→Work Auto (Mode one)

SETMENU←SET← | CC01-CC99 | →ENT→Work Auto (Mode two)

SET MENU←SET← | EE01-EE99 | →ENT→ The operation mode of the lines
divide the square

SET MENU←SET← | dE00-dE00 | →ENT→Demo Mode

SET MENU←SET← | SoUd-SoUd | →ENT→ Sound Mode

SET MENU←SET← | S1Av-S1Av | →ENT→Slave Mode

PS 1:

Display the OFF time , It shows OFF if didn' t press any Button during
the Pre-setting time .

The Power light on , press any keep to run the display

Under the DMX Model , it shows OFF if you didn' t press any keys .

The Power light on , press any keep to run the channels value

PS 2:

Under the DMX Model , if no have DMX signal , it will change to the Auto
Program , Sound Active or stop running , upon receiving the DMX signal ,
the system will be control by the DMX Controller .

Remarks :

THE Digital Points means instruction information , from Left to Right
as : 1. DMX sending & receiving Signal point

2. Memory Read Write instruction (after editing the information and

press ENT, the point will be light ,means saving the data)

3. Power instruction
4. Button /Keys effect instruction

The Button/Key from Left to Right as:

1. ESC/SET
2. UP
3. DOWN
4. ENTER

5、Channels Value:

Ch1: Rotation effect

- | | |
|---------|---|
| 000-005 | light OFF |
| 006-049 | opposite angle rotation, ②-⑥ light, ①-⑤light, ③-⑦light ④- ⑧light Without base color |
| 005-104 | opposite angle rotation, ①-②light, ③-④light, ⑤-⑥light, ⑦-⑧light With base color |
| 105-154 | a set of color rotation |
| 155-204 | Square rotation |
| 205-252 | full color rotation, |
| 253-255 | Manual adjusting, start CH8-CH31 dimmer |

Ch2: Rotation speed

- | | | |
|---------|-----------------------------|----------------|
| 000-127 | forward direction rotation | Rotation speed |
| 128-255 | opposite direction rotation | |

Ch3: Running water

- | | |
|---------|------------------------------|
| 000-063 | light OFF |
| 064-128 | single segment running water |
| 129-192 | double segment running water |
| 193-255 | full light |

Ch4: 1=spread out; 0=inward spread

- | | |
|-----------------|---------------|
| 000-127/128—255 | Segment color |
| 000-018/128-147 | red |
| 019-037/148-165 | green |
| 038-055/166-183 | blue |
| 056-073/184-201 | R/G |
| 074-091/202-219 | G/B |
| 092-109/220-237 | R/B |
| 110-127/238-255 | RGB |

Ch5:

- | | |
|---------|--|
| 000-255 | spread tube speed adjustment from fast to slow |
|---------|--|

Ch6: rotation speed

000-032 without rotation


033-255 single rotational, speed adjustment

Ch7: Strobe

6-255 adjusting of strobe speed


Ch8:	Lighting group 1	0-255	Red turning from brightness to darkness
Ch9:		0-255	Green turning from brightness to darkness
Ch10:		0-255	Blue turning from brightness to darkness
Ch11:	Lighting group 2	0-255	Red turning from brightness to darkness
Ch12:		0-255	Green turning from brightness to darkness
Ch13:		0-255	Blue turning from brightness to darkness
Ch14:	Lighting group 3	0-255	Red turning from brightness to darkness
Ch15:		0-255	Green turning from brightness to darkness
Ch16:		0-255	Blue turning from brightness to darkness
Ch17:	Lighting group 4	0-255	Red turning from brightness to darkness
Ch18:		0-255	Green turning from brightness to darkness
Ch19:		0-255	Blue turning from brightness to darkness
Ch20:	Lighting group 5	0-255	Red turning from brightness to darkness
Ch21:		0-255	Green turning from brightness to darkness
Ch22:		0-255	Blue turning from brightness to darkness
Ch23:	Lighting group 6	0-255	Red turning from brightness to darkness
Ch24:		0-255	Green turning from brightness to darkness
Ch25:		0-255	Blue turning from brightness to darkness

Ch26:	Lighting group 7	0-255	Red turning from brightness to darkness
Ch27:		0-255	Green turning from brightness to darkness
Ch28:		0-255	Blue turning from brightness to darkness
Ch29:	Lighting group 8	0-255	Red turning from brightness to darkness
Ch30:		0-255	Green turning from brightness to darkness
Ch31:		0-255	Blue turning from brightness to darkness

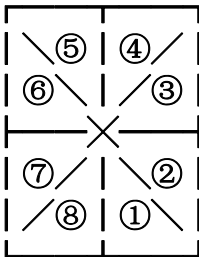 

6、Installation & connecting

 - 1) Please keep the Ground to be flat and orderliness;
- 2) Please connect the Dancing Floor' s Power Cable and Signal Cable asbelow:1 loop could connect to 12Pcs Dancing Floor

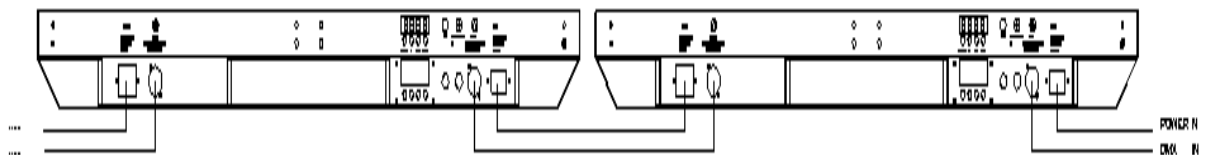

- 3) Please using the Connecting Fitting to fix up both dancing floors:

